


ASSEMBLY INSTRUCTIONS

- DO NOT assemble or dismantle your gazebo during adverse weather conditions.
- ALWAYS ensure the gazebo is securely anchored with either a tie down kit or with leg weights.
- NEVER leave your gazebo unattended before it has been securely anchored.
- Our gazebos are not permanent structures and SHOULD NOT be left unattended for prolonged periods of time (especially during adverse and/or windy weather conditions).
- Damage caused through improper use or incorrect anchoring of structures (in adverse weather) will not be covered under our warranty.

HOW TO ASSEMBLE YOUR POP UP GAZEBO

Step 1

Place the gazebo frame in the desired location and gently pull outer frame legs partially with a second person assisting on the opposite side.

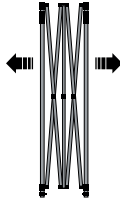


Step 2

Place the canopy over the partially open frame, align three of the four corners. Lift the frame by the lower part of the truss bars until the frame is fully opened.




Step 3

Lock the slider bracket into place by holding frame with one hand and lifting the slider bracket up into place until it locks. Then pull down canopy.

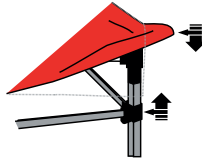

Step 4

Lift up each leg and slowly pull out the inner leg until it pops into place. Repeat with each leg and adjust height by using the pull pin adjuster.

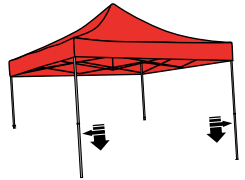


PLEASE REMEMBER TO BE CAREFUL NOT TO PINCH FINGERS OR HANDS

SIMPLY CARRY OUT THESE ASSEMBLY INSTRUCTIONS IN REVERSE TO DISMANTLE YOUR GAZEBO


HOW TO ATTACH TIE DOWN KITS

Best practice is to anchor the straps to the frame itself, and not the canopy. If the straps are attached to the canopy in severe wind, this can cause the material to rip and is void under warranty.

Step 1

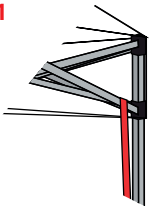

Step 2

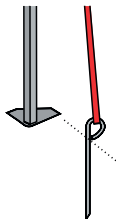

Please see back for CARE INSTRUCTIONS



GAZEBO CARE INSTRUCTIONS

Do pop up gazebos, instant shelters and mini marquees have to be anchored?

Yes. All pop up gazebos, instant shelters and mini marquees must be properly anchored, this is essential to avoid wind and storm damage. It is absolutely necessary to prevent the gazebo unit from taking off as this might cause not only irreversible damage to the shelter itself but could also lead to damaging other property. All our shelters and marquees are supplied with a standard tie down kit. To provide further stability to your pop up gazebo in windy weather conditions or on wet, soft ground additional anchoring may be required to ensure your gazebo unit remains stable and safe.

When securing your shelter on hard standing ground such as concrete or tarmac we recommend the use of either steel stacking or sand bag leg weights.

Can the gazebo canopy stay attached to the frame?

Yes it can, but there are pros and cons. Obviously leaving the canopy attached to the frame saves time - although it only takes a couple of minutes to remove and replace.

On the other hand if you use it professionally for exhibitions, markets etc. and the shelter is often being transported, we do not recommend leaving the canopy attached. The reason being that the vibrations and shaking during transport can cause the frame parts and joints to rub against the fabric/pvc coating and thus inflicting damage to the canvas.

Storage of walls and gazebo canopy

Ensure the walls and canopy are completely dry before storing for any length of time. If they are wet or damp when packing away after using the gazebo, you must unpack them and dry them out thoroughly before storing away.

Cleaning

To clean your canopy and walls we recommend a mild solution of warm soapy water with a soft scrubbing brush.

DO NOT use pressure washers or steam cleaners as this will affect the material and waterproofing.

Condensation

Condensation can be caused by changes in temperature when left up overnight or for a long period of time.

Condensation may be reduced by airing out the shelter on a regular basis. Condensation may gather around the seams giving the impression that the canopy is leaking.

IMPORTANT!

- 1 Always ensure the shelter is securely anchored with either the tie down kit or leg weights.
- 2 If the gazebo and its accessories are packed away whilst wet, make sure they are unpacked and dried out within 24 hours.
- 3 If the gazebo needs cleaning use a mild diluted detergent and clean by hand. None of the coverings are machine washable.
- 4 It is recommended to remove the canopy from the frame after use, as leaving the canopy on during transportation may cause excessive wear and tear which is not covered under warranty.